
IASI-Twin Relay

BV4501

|



BV4501
IASI Twin Relay

Product specification

December 2008 V0.a

IASI-Twin Relay**BV4501****Contents**

1.	Introduction	4
2.	Features	4
3.	Electrical Specification	4
4.	Factory Reset	4
5.	IASI Command set.....	5
5.1.	a	5
5.2.	b	5
5.3.	j (lower J).....	5
5.4.	k	5
5.5.	l (lower L).....	5
5.6.	Commands m,n & o	5
6.	Revisions to the IASI-2 Section	6
7.	Introduction to IASI-2	6
8.	IASI-2 Electrical Interface	6
9.	Serial Connections	6
10.	Start Up	7
11.	Command Format	7
12.	Numbers.....	7
13.	Factory Configuration	7
14.	Non/Inverted Mode	7
15.	Commands	7
15.1.	Command 1	7
15.2.	Command 3	7
15.3.	Command 4	7
16.	Addressable Commands.....	8
16.1.	Summary	8
16.2.	A (0x41).....	8
16.3.	B (0x42).....	8
16.4.	C.....	8
16.5.	D.....	9
16.6.	E	9
16.7.	F	9
16.8.	G.....	9
16.9.	H.....	9
16.10.	U.....	9
16.11.	M	9
16.12.	N.....	9
16.13.	P	10
16.14.	R.....	10
16.15.	V.....	10
16.16.	T.....	10

IASI-Twin Relay

BV4501

16.17.	Z.....	10
17.	Error Codes.....	10
18.	Connecting and Configuration.....	11
18.1.	Start Up	11
19.	Microcontroller Use	11
19.1.	Multiple Devices	12
20.	Restoring Factory Defaults	12
20.1.	Software	12
20.2.	Hardware	12

IASI-Twin Relay

BV4501

Rev	Change
Jan. 2009	Preliminary
Sept 2010	Fitted with higher current relays
April 2010	Relay Specifications added

1. Introduction

The BV4501 is a twin relay that works with the standard IASI interface, this means that it can be controlled with either a serial PC COM port directly or from a microcontroller serial interface.

It is possible with simple serial commands to control much larger circuits without the need to build the required circuitry.

Default IASI2 address 'b'

There is also an I2C version available part number BV4502.

WARNING: This device must NOT be connected to AC Mains voltages without the proper advice from a qualified electrician. Mains voltages are Lethal you have been warned.

2. Features

- IASI2 interface
- Connects directly to a PC com Port or via a USB, BV101
- Connects directly to a microcontroller serial port
- SPDT relays up to 10A, 240VAC
- 5V supply
- Power 2.4mA – no relays on
- Power 50mA 1 relay
- Power 94mA 2 relays
- Timed on/off delays
- Screw terminals for external equipment
- Size 50mm x 40mm x 17mm

3. Electrical Specification



There is an IASI interface for controlling the relays and 2 x 3 way screw terminals for the output.

The 5 pin IASI connection is fully described in section 7.

Outputs from the relays are shown in Figure 1. At switch on the normal condition is for the relays to be off.

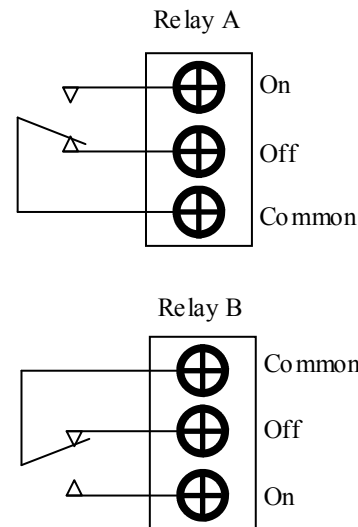


Figure 1 Terminal Connectors

The relays fitted will have the following minimum specification:

- Normally Open 10A @ 240V AC
- Normally Closed 6A @ 240V AC
- 10A @ 24V DC

4. Factory Reset

As the IASI address is stored in EEPROM and is fully configurable, it is possible that the user may forget what the address is. To restore factory defaults do the following:

- 1) remove power
- 2) Connect the square hole marked FR to the hole next to it, this will in fact connect the square hole to +V
- 3) Apply power
- 4) Remove power

The address and any other parameters that may be stored in the first half of the EEPROM will now be reset.

In general the first 16 bytes of EEPROM are normally reserved for system use but these areas can still be overwritten by the user.

IASI-Twin Relay

BV4501

5. IASI Command set

NOTE there are two distinct command sets. The system command set, commands normally using upper case and the device command set. The communication command set is described in the introduction to IASI-2 (Intelligent Asynchronous Serial Interface) section 6.

**** Commands are case sensitive ****

LCD Command Set	
a	Relay A on/off
b	Relay B on/off
j	Relay A timed on
k	Relay A timed off
l (lower L)	Relay A timer display
m	Relay B timed on
n	Relay B timed off
o	Relay B counter display

Table 1 Relay Command Set

Table 1 is a command summary of all of the Relay commands.

All of the above commands require a device address to be specified and command examples are shown using the default address 'b'

5.1. a

Name: **Relay A**

Command Parameters: **<1 or 0>**

Typical Use **ba1**

This command turns relay A either on or off. 1 is on a and 0 is off. At reset the relay is in the off condition. This command overrides any timed mode commands and acts immediately.

5.2. b

Name: **Relay B**

Command Parameters: **<1 or 0>**

Typical Use **bb1**

This command turns relay B either on or off. 1 off condition. This command overrides any timed mode commands and acts immediately.

5.3. j (lower J)

Name: **Relay A timed on**

Command Parameters: **<n>**

Typical Use **bj50**

This command turns relay A on in n number of 200mS intervals. As an example if the relay is required to come on 1 minute seconds after

the command then (60 / 0.2 = 300) the command would be:

bj300

This assumes the device address is 'b'

The number n is in decimal and is a 16 bit value so the maximum delay is 65535 200mS intervals or just over 218 minutes (3.6 hours). No checking is made if the number entered is not within this range so unpredictable results will occur if a number is entered outside of this range.

5.4. k

Name: **Relay A timed off**

Command Parameters: **<n>**

Typical Use **bk50**

This command turns relay A off in n number of 200mS intervals. As an example if the relay is required to come on 1 minute seconds after the command then (60 / 0.2 = 300) the command would be:

Bj300

This assumes the device address is 'b'

The number n is in decimal and is a 16 bit value so the maximum delay is 65535 200mS intervals or just over 218 minutes (3.6 hours). No checking is made if the number entered is not within this range so unpredictable results will occur if a number is entered outside of this range.

5.5. l (lower L)

Name: **Relay A counter**

Command Parameters: **none**

Typical Use **bl**

The command is used for inspecting the state of the count, using commands j or k will set a counter that is decremented every 200mS, this command allows the contents of this counter to be read.

The value is in ASCII decimal followed by a prompt.

5.6. Commands m,n & o

These are the same as j,k and l but for relay B.

IASI-Twin Relay

BV4501

6. Revisions to the IASI-2 Section

Rev	Change
Oct 2008	Preliminary
July	Added new command H that returns the device number

7. Introduction to IASI-2

The Intelligent Asynchronous Serial Interface (IASI-2) is a common standard that makes it much easier to control and use hardware from either a standard communication interface (terminal) or a microcontroller.

It is based on a very simple text command set and a flexible hardware and software interface. The 'Intelligent' aspect is derived from the fact that each particular IASI-2 knows about the connected hardware so a simple command can make the hardware perform a reasonably complex function.

When used in a microcontroller system this enables the controller and designer to concentrate on the important aspects of the design and control rather than the mundane job of controlling the hardware. It also means that the task of driving common peripherals is not being constantly re-invented.

8. IASI-2 Electrical Interface

The device has very simple requirements. A power supply, transmit and receive lines as shown in table E1.

The interface is specifically designed so that it can be connected to either a standard com port (on a PC for example) or directly to a microcontroller UART or even a microcontroller port pin with a software generated UART (Universal Asynchronous Receiver and Transmitter). A five pin connector is used with normally only 3 or four pins being connected at any one time.

There are **TWO** receive lines, pin 1 receive line

Pin	Name	Description
1	RX	Receive data in non-inverted form at +5V logic levels. Use this pin for connecting to MAX232 devices or directly to microcontrollers.
2	TX	Transmit (output) data. This is 0V and +5V, RS232 levels are not used. Devices will work without this connected but no feedback can be received. This pin is configurable in software to transmit either normal or inverted logic. (see multiple devices section 19.1)
3	+5V	Standard 5V power to the device
4	RX-Invert	Receive data (input) this will accept -12V to +15V volts in inverted logic as is normally available on a PC Com port. The format is RS232 1 start bit 8 data bits and 2 stop bits.
5	GND	Ground

Table E2 Serial Connection Details

will accept normal 5V logic as presented by a microcontroller pin or UART and pin 4 will accept positive and negative voltages up to 15V that are normally present on a standard RS232 interface. Pin 4 will also invert the logic which is also normal for this interface.

The Baud rate is automatically detected at start up on the first or second receipt of Carriage Return (#13). The detection is from a fixed set of Baud rates: 9600, 14,400, 19,200 and 38,400.

The transmit pin has an open collector output that has a pull-up resistor on board connected through a jumper. Where more than one device is used on the same serial line, only one jumper should be shorted. See the section on multiple devices for further information.

9. Serial Connections

The device is designed to work in either of **two** modes: an INVERTED mode for connecting directly to an RS232 port (factory default) or a NON-INVERTED mode for connecting to a microcontroller UART.

As previously described there are two inputs, one for each alternative interface. On the transmit side (output from the interface) there is only one pin that takes care of inverted and non-inverted logic, this is configured in software. The output is 0 to +5V only, rather than the RS232 specification requiring positive and negative signals.

On most RS232 specification interfaces this will work although it is not within the actual RS232 specification.

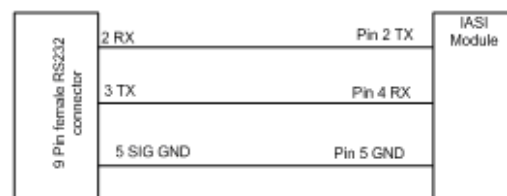


Figure 2 Connection to a PC

Figure shows the connections to a 9 pin D type

IASI-Twin Relay

BV4501

connector found on most PC's.

10. Start Up

The interface will wait for a Carriage Return (#13) from either the inverted or non-inverted input in order for it to establish a Baud rate. The Baud rate is determined from a fixed range 9600, 14,400, 19,200 and 38,400.

No feedback is given and so it is possible wise to send more than one CR just in case. Once the Baud rate has been established the interface is ready to receive commands.

11. Command Format

All devices have an address which is one byte in the range 97 to 122 (0x61 to 0x7A), this corresponds to the printable ASCII characters 'a' to 'z'

The **default address is 'a'** and all devices must be addressed although there are some global commands that address all of the devices at once.

There are basically two sets of commands, those which are common to all devices, these are usually bytes that correspond to upper case characters 'A' - 'Z' and there are device specific commands using higher values that correspond to lower case characters 'a' - 'z'.

This section deals with the system commands.

12. Numbers

Some commands require an ASCII coded number and other commands require a byte, for example when specifying the brightness of the LED display the command is **aj4**.

'a' Is the address

'j' Is the brightness command and

'4' Is the value of the brightness.

This command is specified as an ASCII code so the actual bytes sent to the LED device is:

97 (a) 106 (j) 52 (4)

Note that the '4' is sent as byte 52 (0x34) and not the byte 4.

This is convenient when directly typing commands at a terminal but can cause confusion when using code. As a generalisation if a byte value is required then the code will be something like:

Send(#4)

But if an ASCII coded command is required as in the above example, it would probably be sent as text:

Send("aj4");

13. Factory Configuration

When an IASIM (Intelligent Asynchronous Serial Interface Module) leaves the factory it is usually configured to address 'a'

Factory settings can be restored normally by shorting two connections with a piece of wire and cycling the power.

14. Non/Inverted Mode

As previously mentioned the device is capable of operating with a standard RS232 communication port (inverted) and a microcontroller (non-inverted). The device will accept either signal but will output only one and at reset this is inverted

15. Commands

The interface is completely software driven, all commands and configuration are done through a serial interface. The only exception to this is the hardware factory default restore.

When a command has successfully completed it will return the byte value 62 (0x3e) (displayed value '>') This can be detected by software as an acknowledgement (ACK).

There are a few special commands that enable discovery of the devices and system wide defaults.

15.1. Command 1

This is the discovery command and it is a byte with a value of 1 that needs to be sent to the device, this can be done on a terminal by (Ctrl-A). On receiving this, the device will send back its address. This however is done in a timely fashion with address 'a' being sent first and 'z' last. Each device has 30ms to send its address and will wait its turn, therefore the device with address 'z' will wait 26x30=780ms to send its address.

The address is sent along with the ACK '>' As an example if 3 devices were connected to the bus 'a', 'f' and 'p' the response to command 1 would be:

a>f>p>

15.2. Command 3

This will reset all devices as if they had just been powered up. Following this command one or two CR is required to establish the Baud rate.

15.3. Command 4

At reset the output from the device will be inverted, this command will set all devices to non-inverted. This command should be used if the devices are connected to a microcontroller. Or if a USB-TTL (BV101) type device is being used. The start up sequence for example would be:

IASI-Twin Relay

BV4501

CR
 CR ; to establish baud rate
 Command 4 ; to set non-invert

At this point a discovery command (1) could be sent to see if all of the expected devices are working.

16. Addressable Commands

The next block of commands are directed at a single device and so need an address before sending the command.

The default address of a device is 97 ('a') By convention these commands are in the range 65 to 90 giving a printable character of 'A' to 'Z', this makes it easier for text input if required.

16.1. Summary

Command	Description
A	Address
B	Write to EEPROM
C	Turn off ACK
D	Delay
E	Turn off error reporting
F	Factory reset
G	Read EEPROM
H	Returns device number
U	Unlock
M	Macro run at start up
N	Switch to non-inverted
P	Print contents of EEPROM
R	Reset device
V	Version
T	Test macro
Z	Create macro

Note that examples will use the default address of 'a' and the address and commands will be shown as their ASCII code because these can be entered directly from a terminal. The device however will only recognise the byte value so when 'aA' is entered the device will see two bytes 97 and 65

16.2. A (0x41)

Name: **Address**

Command Parameters: **byte 97-122**

Typical use **aAp**

This command is used to set the address of the device. The address is one byte with a value of between 97 and 122, giving 26 possible

addresses. The range has been chosen because it renders the values as printable characters in the range 'a' to 'z'.

To set a device from its default address to address 'p':

aU

aAp

If this is successful the device will return byte value 0x3e which is the ASCII code for '>' Note that this command requires an unlock (aU) before it can be issued, this is a safeguard to prevent the device from unexpectedly changing the address.

The address is stored at location 0 of the EEPROM – see command B.

When a device is used with other devices on the same bus the addresses must be set up individually before placing them on the same bus.

16.3. B (0x42)

Name: **Write to EEPROM as text**

Command Parameters: <address><space>'text'

Typical use **aB10 'Hello'**

This device has an internal EEPROM with an address range 0 to 255. Some of the addresses are used for system and macro storage so care must be taken where this text goes.

No check is made that the system or macro area is being overwritten, the first 16 bytes are reserved for system use so overwriting this may necessitate a hardware factory reset.

The macro area starts at 0xB0 so if there is a macro defined then this should be avoided.

The command format is
 aB<address><space>'text'

Where <address> is the starting address of the EEPROM between 0 and 256. There must be a space between the starting EEPROM address and the single text quote. Note that this is a single quote (0x27). The text is written and the command appends a 0 onto the end of it so it will occupy one extra EEPROM space. Hello for example would be stored as:

0x48,0x65,0x6c,0x6c,0x6f,0x0

This is 6 bytes not 5 as may be expected.

16.4. C

Name: **Turn off ACK**

Command Parameters: **None**

Typical use **aC**

Some devices may be adversely effected by the ACK command or the controlling software may not require the ACK #67 byte. This command will suppress the ACK.

IASI-Twin Relay

BV4501

The device must be reset to turn it back on.

16.5. D

Name: **Delay**

Command Parameters: **1-255**

Typical use **aD50**

Pauses the device for a number of milliseconds. Some devices may require a small delay between commands particularly when used with the macro facility.

The delay is only approximate and should not be used for timing purposes.

As an example the LCD display required a delay after clearing and cursor home, so the macro would look like this:

```
aZac1;aD50;at'Hello';
```

16.6. E

Name: **Turn off error reporting**

Command Parameters: **none**

Typical Use **aE**

By default error reporting is enabled and this will be reported and an output prefixed by Error, for example **Error 2**. This may get in the way of the program trying to control the device and so it can be disabled with this command. The only way to enable it again is by resetting the device.

Example: aE.

16.7. F

Name: **Factory reset**

Command Parameters: **Yes**

Typical Use **aFYes**

Sets the device back to the factory defaults, the command must be followed by bytes 0x59, 0x65 and 0x53 which is the ASCII codes for 'Y' 'e' 'S'

This will prompt on completion and will not require re-initialisation, the address of course will now be 'a'.

16.8. G

Name: **Read EEPROM**

Command Parameters: **aGss nn**

Typical Use **aG0 3**

The EEPROM values can be read with this command.

ss is the start address of the EEPROM in **hex**

nn is the number of bytes to read in **hex**

This command will accept ss and nn as number text values, this means that for the command:

```
aG10 3
```

The actual bytes sent to the device are:

```
0x61,0x47,0x31,0x30,0x20,0x33
```

Note how the 10 for the start address of the EEPROM is specified as 0x31,0x30 which is the ASCII code for 10.

In a similar way the command returns the values as text.

Example:

```
aG0 3
```

Will typically return:

```
610DFF>
```

16.9. H

Name: **Returns device number**

Command Parameters: **none**

Typical Use **aH**

Returns a number representing the device product number.

16.10. U

Name: **Unlock**

Command Parameters: **none**

Typical Use **aU**

The unlock command is required for certain other commands that may change the way the device works. It is a safeguard from accidentally issuing a command, change of address for example.

16.11. M

Name: **Run macro at start up**

Command Parameters: **1 [0 or nothing]**

Typical Use **aM1**

Macro commands are stored at 0xB0 onwards on the EEPROM. This command will set a flag in EEPROM that will be detected by the start up procedure and run the macro.

The macro will be run before the auto Baud detection. Once activated the command will always be run so care should be taken to test the macro (command T) before using this command otherwise a hardware factory reset may be required.

To activate macro at start up issue **aM1**, to turn off macro at start up issue **aM0** or just **aM**. Note the 1 and 0 are text numbers, i.e 0x31 or 0x30

16.12. N

Name: **Non-Inverted output**

Command Parameters: **none**

Typical Use **aN**

IASI-Twin Relay

BV4501

Pin 2 on the electrical interface that supplies the output information (Tx line), can be supplied inverted (at reset, start up) or non-inverted. Inverted is used if the device is connected directly to an RS232 PC Com. port and non-inverted is used when the device goes through a converter (BV201, BV101) or is connected to a microcontroller.

At reset the device is always in the inverted mode. To set the device to non-inverted use aN, reset is required to set the device back to inverted mode again.

This command is similar to Command 4 except this acts on a device individually whereas command 4 will set all of the devices on the same bus to non-inverted.

16.13. P

Name: **Print contents of EEPROM**

Command Parameters: **<start address>**

Typical use **aP10**

This will take the contents of the EEPROM at the given starting address and output the data to Tx (pin 2) as raw data (bytes) unlike the G command that will output the data as text numbers.

The command will stop outputting either when it reaches a value of 0 in the EEPROM or when the end of the EEPROM (255) is reached.

This command is the opposite of the B command, the B command will write text to the EEPROM and this command will read and output it.

The start address of the message location within the EEPROM needs to be specified, e.g. **aPA0**.

16.14. R

Name: **Reset**

Command Parameters: **none**

Typical Use **aR**

Resets and individual device. The baud rate will need establishing again after this command is used.

This is similar to command 3 but works on a single device.

16.15. V

Name: **Version information**

Command Parameters: **none**

Typical Use **aV**

This simply returns a sting that contains the firmware and device version information.

16.16. T

Name: **Test macro**

Command Parameters: **none**

Typical Use **aT**

Runs the macro. This is created by the Z command. It is wise to test macros with this command before using the M command.

16.17. Z

Name: **Create macro**

Command Parameters: **see text**

Typical Use **aZac1;at'Fred'**

A macro is created at 0xB0 in the EEPROM space and so if it is used, it is up to the user not to write over it. The whole macro must be specified on one line (maximum number of bytes 63) and ';' (semicolon) are used to separate commands, they are interpreted as EOL when the macro is running. Example

aZaN;aV;aP10;

The above example will change the mode to inverted, print out the version number and print a message stored in the EEPROM at address 0x10. Note that the macro also finishes with a ';' .

17. Error Codes

Error codes will be displayed if the debug level (ZD) is set to greater than 0.

Code	Description
2	Unknown command, the command issued is not in the command table for this device.
3	Bad device address, the address specified is outside the address range.
4	Bad number usually caused by specifying a hex number (say D0) when a decimal number is required.
5	No terminating quote, for example: aB10 'Hello would give this error.
6	Command locked, the command used should be unlocked with the U command before using.

IASI-Twin Relay

BV4501

18. Connecting and Configuration

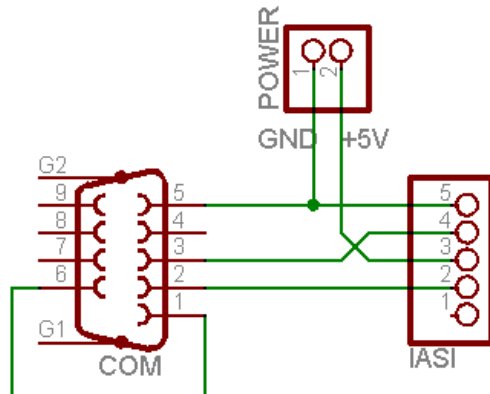


Figure 3 Connection wiring

The above wiring diagram shows the connections to a standard PC 9 way com port (RS232 connector). Pin 1 of the IASI-2 has no connection as this is used to connect to a microcontroller UART.

The factory defaults will work with the above configuration.

Start HyperTerminal or some other terminal software, BV Terminal is ideal and can be obtained from www.byvac.com The following settings should be used:

Baud rate 9600
 Start bits 1
 Stop bits 2
 Handshake none
 Local echo on

(The Baud rate can be one of the selected rates, see earlier)

Power up the device and press 'return' a few times. The device should now be listening. Press **CTRL-A**, this will send command 1 to the device, the device should respond with **a>**.

At this point if you are going to use multiple devices than this is where you would set the address. To set the address to 'b' for example the following is required:

aU

aAb

The first command unlocks and the second command sets the device address to 'b'. This can be verified by issuing **bV**, the firmware version should be returned.

18.1. Start Up

It may be that you want to use the device through a line driver device (MAX232) or microprocessor UART without bothering with the PC com port cable. This is also possible.

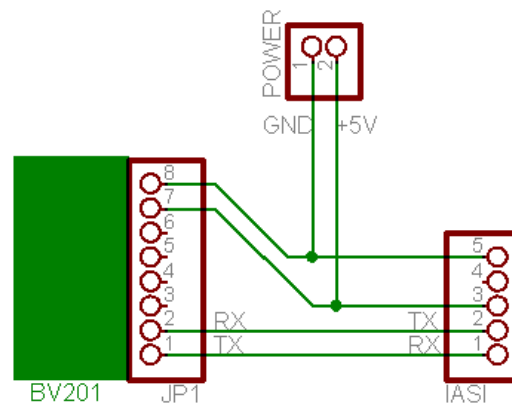


Figure 4 Using non-inverted

The above illustrates the connections used for, in this example a BV201 board that simply translates the PC com port to non-inverted 5V logic levels.

Using a BV101 USB solution could be provided and there would be no need for a separate power supply.

See www.byvac.co.uk for these products.

IASI-2 ALWAYS starts with the output (Tx pin 2) set to inverted mode. If the above connections are used then the device or devices need to be changed so that the output is non-inverted. This is easily achieved by issuing command 4. Once this command is issued all out put is then non-inverted.

Note that the device will revert back to non-inverted if reset or powered of and on again. This provides a consistent and easy to use interface without the additional complication of configuring the device.

19. Microcontroller Use

The output from a microcontroller UART is non-inverted, the Tx pin of the microcontroller will go to the Rx pin 1 of the IASI-2 device.

The start up code could consist of the following:

- 1) Set the Baud rate of the UART to match one of the rated for IASI-2.
- 2) Send CR (#13) 3 times: this will establish the Baud rate for any connected device.
- 3) Issue command 4: this will make all the devices use non-inverted output from now on.
- 4) Issue command 1: the devices on the bus will respond and reply in non-inverted mode through pin 2.

All of the devices are now ready to be used in the non-inverted mode. Each time the device is reset, either command N or 4 should be used to set the output to non-inverted.

IASI-Twin Relay


BV4501

19.1. Multiple Devices

In both modes, inverted and non-inverted many devices can be connected together and all will receive the correct input.

The output however on pin 2 is connected to an open collector and this must have ONE resistor to complete the circuit. This resistor is on each device by default and is permanently connected via a PCB shorting track.

To connect more than one device ideally only one resistor (one track shorted) should be used, the other tracks cut to accommodate this. In practice however several devices can be connected without any ill effects.

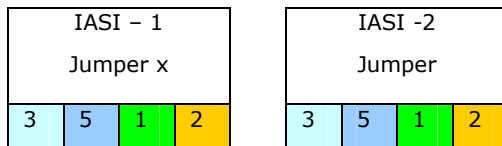

3 - Connect +5V together

5 - Connect Ground together

1 - Connect RX together

2 - Connect TX together

The above illustrates this principle where only one jumper is connected.

A side effect of this is that signalling can only be obtained by pulling the output low and so feedback can only be obtained on **multiple devices using the non-inverted mode.**

20. Restoring Factory Defaults

Factory defaults can be restored either by software or hardware. The factory default condition is:

Address = 'a' (#97)

CR value = #13

20.1. Software

Issue the command **aZyES**.

20.2. Hardware

This is likely to be needed if you have accidentally changed the contents of the first 16 bytes of EEPROM.

1. Power down the device.
2. Temporarily connect the two holes on the device together as shown. If the picture does not match exactly, then look for 5 holes in a row, at one end there will be a square hole, this is hole 1. Connect together holes 1 and 5.
3. Power up the device, this will restore the factory settings.
4. Power down the device.
5. Remove the shorting link.

The device is now restored to the factory settings. NOTE that if a macro was programmed at the factory this will no longer show. On an LCD device for example it will not show the ByVac screen as it did when it left the factory, just the cursor will show.

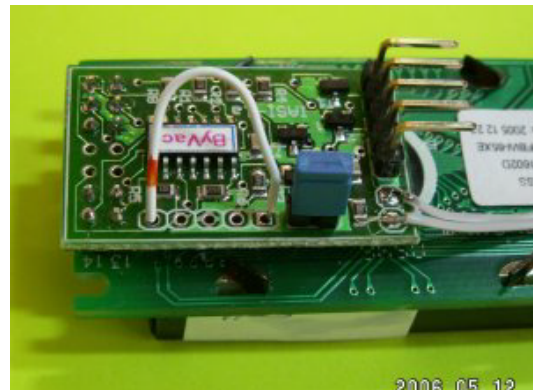


Figure 5 Example Shorting link